

Oil types

For rear axle **without** differential with limited slip (positive traction) approved oils

Hypoid transmission oil SAE 90
refer to „Specifications for Service Products“ page 235

For rear axle **with** differential with limited slip (positive traction) approved oils (observe reference plate on rear axle housing)

Special hypoid transmission oil SAE 90
refer to „Specifications for Service Products“ page 235.3

Oil quantities

| Model | Liters | |
|--------------------|--------------------------------|------|
| 100 | 3.25 | |
| 107, 116.036 | 1.3 | |
| 108, 109, 111, 113 | 2.5 | |
| 114, 115 | with closing cover 1st version | 1.15 |
| | with closing cover 2nd version | 1.0 |
| 116.020, 123 | 1.0 | |

Special tool

Socket/box wrench 14 x 17 mm



000 589 24 07 00

Conventional tool

Screw driver insert 14 mm, 1/2" square

e. g. made by Hazet, D-5630 Remscheid, no. 985-14


Note

When checking and changing oil vehicle must be free standing on wheels.

Before changing oil check sealing on rear axle!


Carefully tighten drain and filler screws.

- Drain oil only with rear axle at operating temperature.
- Top up with recommended quantity of oil.
- Check level of oil: level must reach top of oil filler opening.

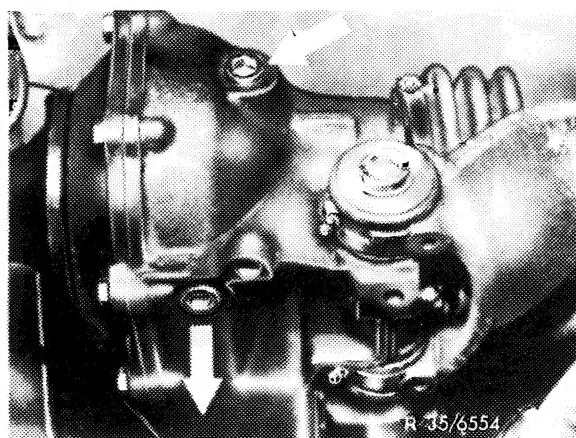


Models 100, 108, 109, 111, 113




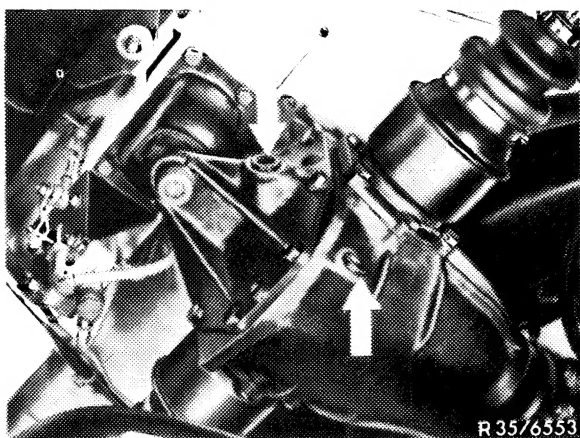

Models 114, 115 Closing cover 1st version

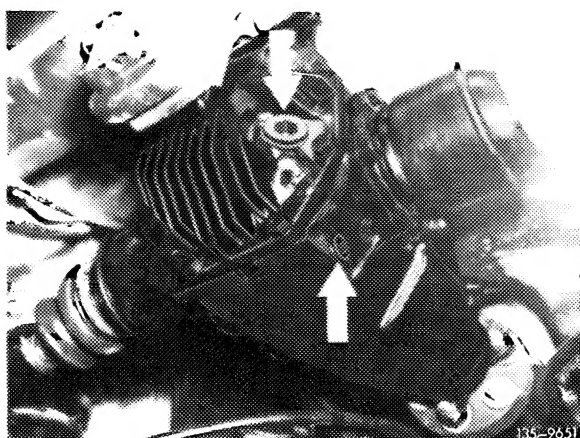

Models 114, 115 Closing cover 2nd version
Models 107, 116 and 123

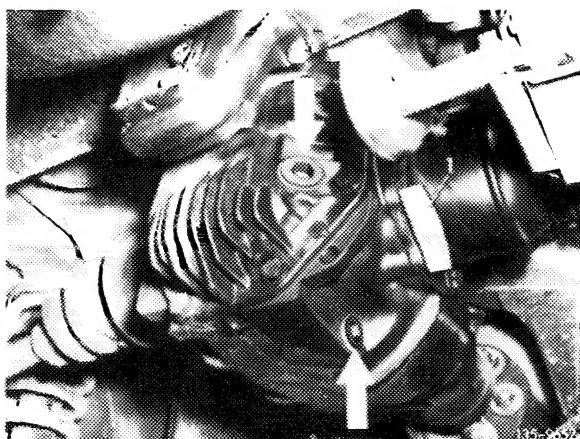

Model 116.036
Rear axle with differential with limited slip (positive traction)
(diagonal swing axle with large center piece)

1 Reference plate for rear axle with differential with limited
slip (positive traction)